


Choosing the correct Chairmat for your floor type is easy with these 3 simple steps



You'll need a ruler, a pin and the carpet you want to test

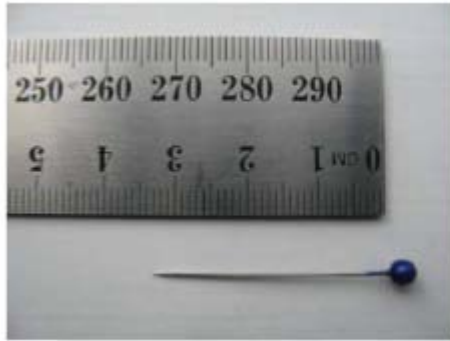





Step 1. Push the pin into the carpet make sure you go right through the underlay as well.



Step 2. Measure how deep the pin went into the carpet.



Step 3. Select the right Chairmat for your floor type.

CARPET TYPE				
CARPET DEPTH	Carpet up to 12mm thick*	Carpet up to 6mm thick*	Carpet up to 18mm thick*	Wood, Tile, Vinyl & Concrete flooring



For more information, contact OfficeMax today.
0800 426 473 www.officemax.co.nz